




JBL Charge Speaker Replacement

This guide will help you to open the device and replace the speakers of the JBL Charge.

Written By: Alexander Castanares

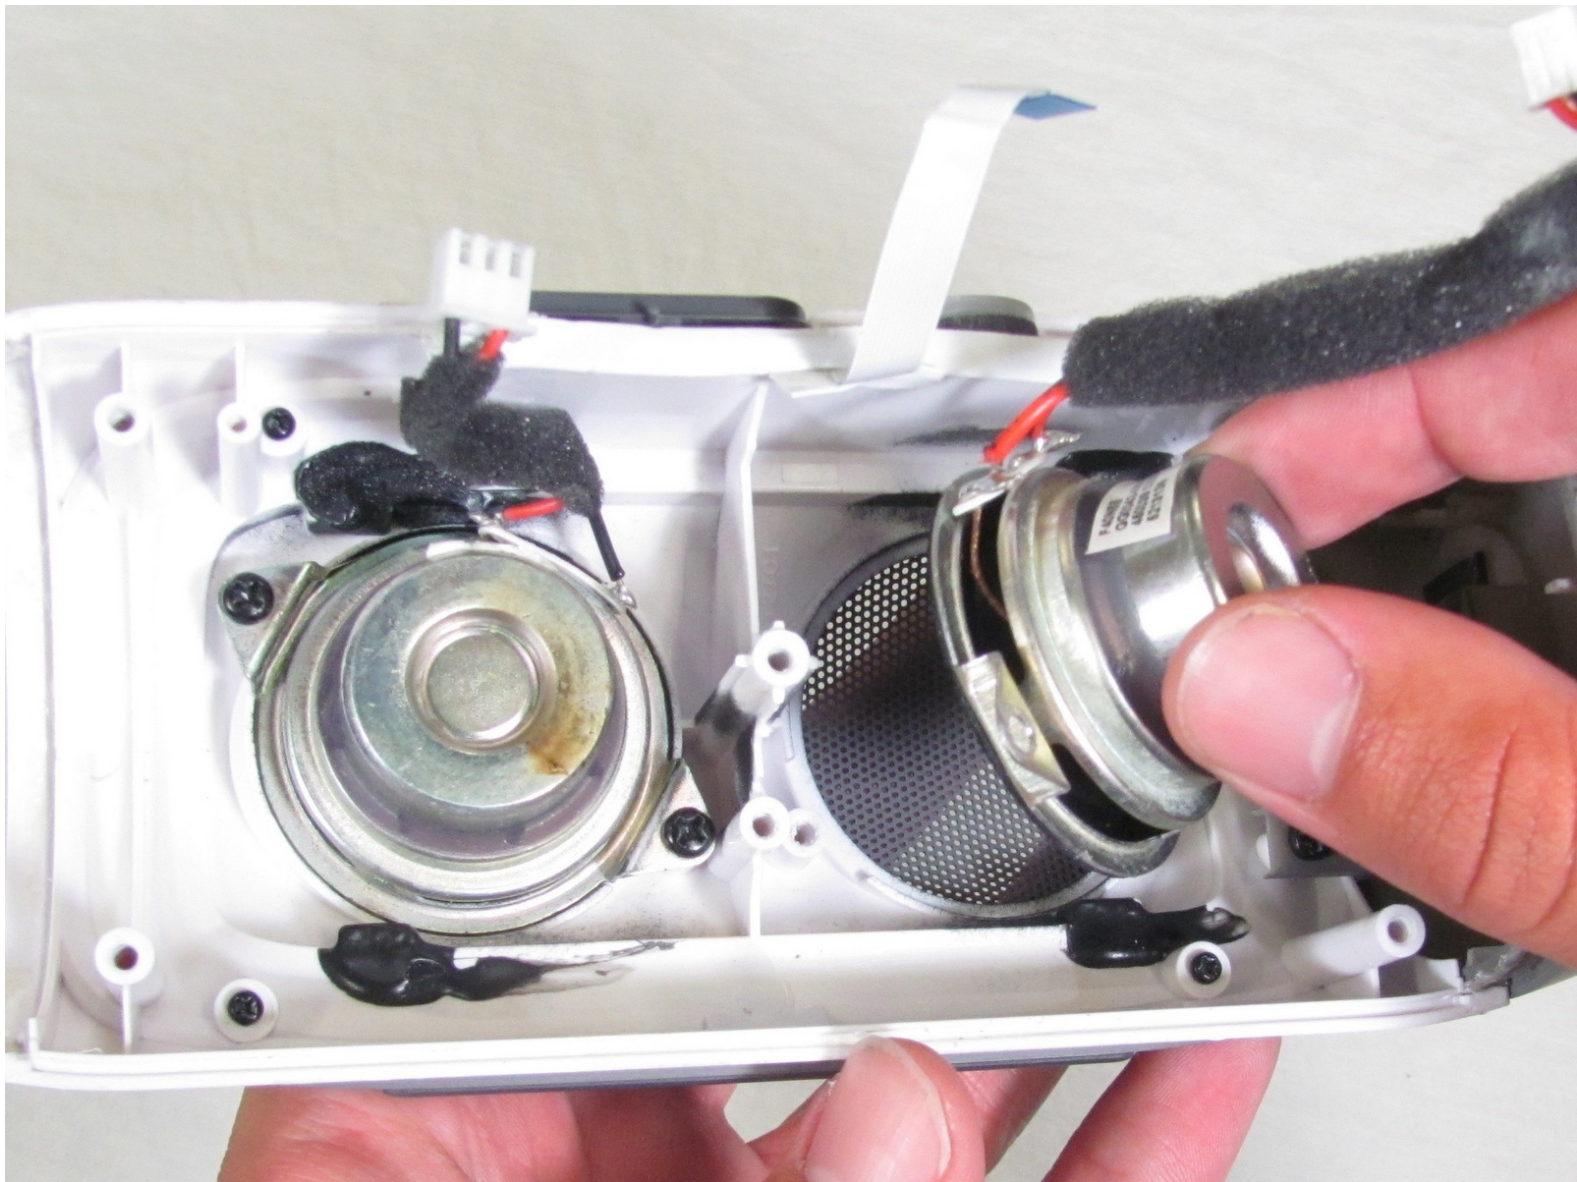

INTRODUCTION

The speakers are located behind the motherboard. Follow this guide to replace one or both broken speakers.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Disassembling JBL Charge Casing




- Make sure the device is powered off before you begin.
- Use a Jimmy or metal spudger on each corner to separate the trim from the device.

Step 2

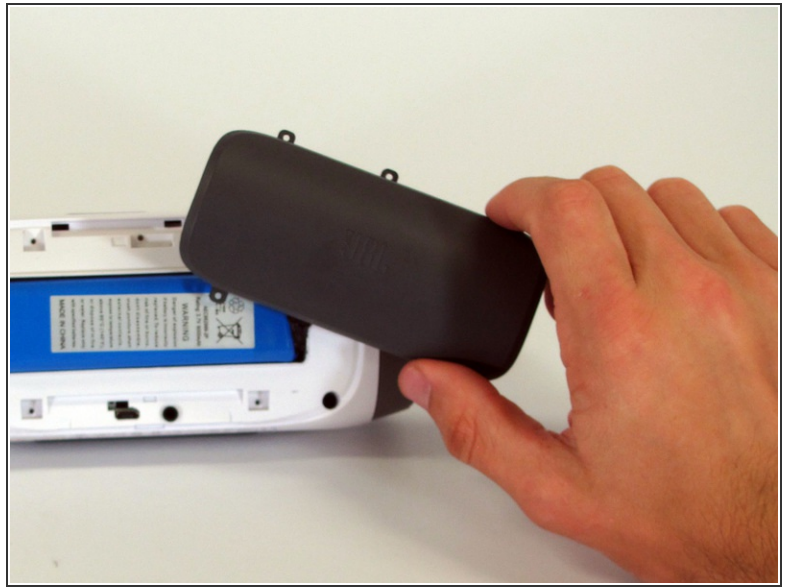

- Use the PH1 screwdriver to remove the five 6 mm Phillips screws from the battery cover.
- Remove the battery cover and set it aside.


Step 3

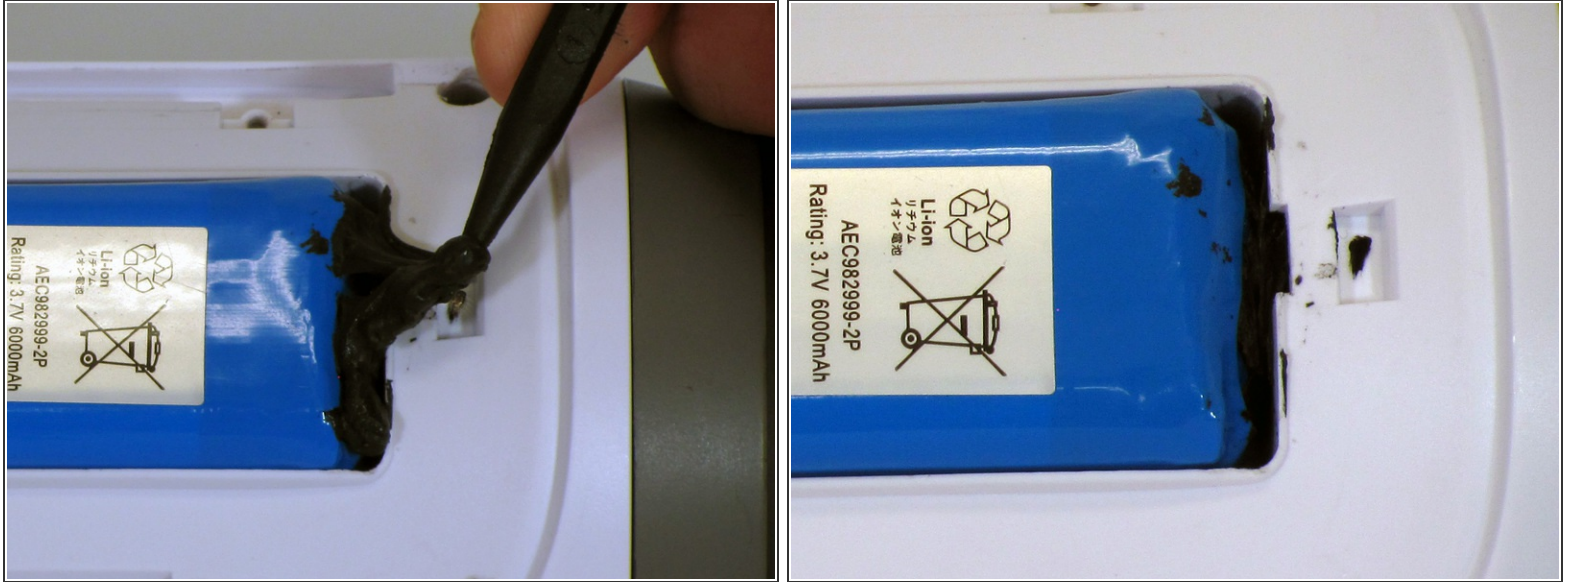

- Use a spudger to remove most of the liquid electrical tape from the battery and battery compartment.

⚠ Be careful to not puncture the battery or damage the battery wire under the liquid electrical tape.


Step 4

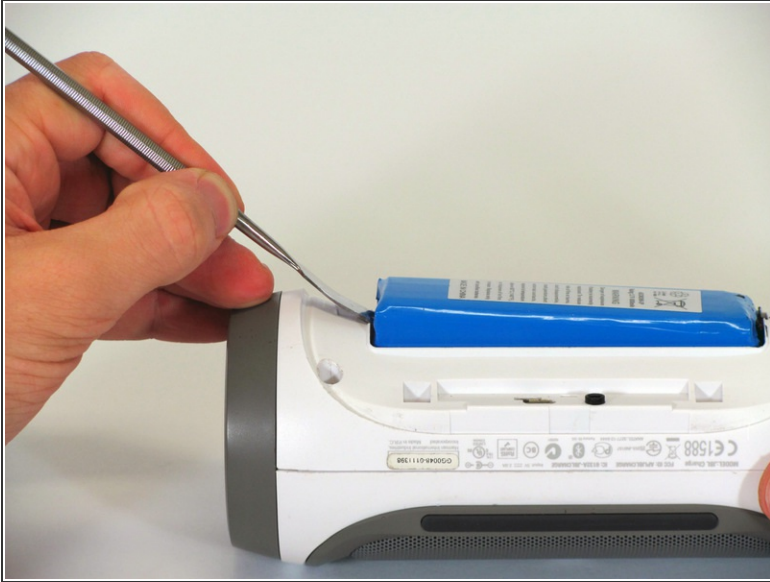

- Use a metal spudger to pry the edge of the battery out of the device.
- Lift the battery just enough to remove the 16mm PH2 screw underneath it.



⚠ Lifting the battery too far will cause damage to the battery wire.

Step 5

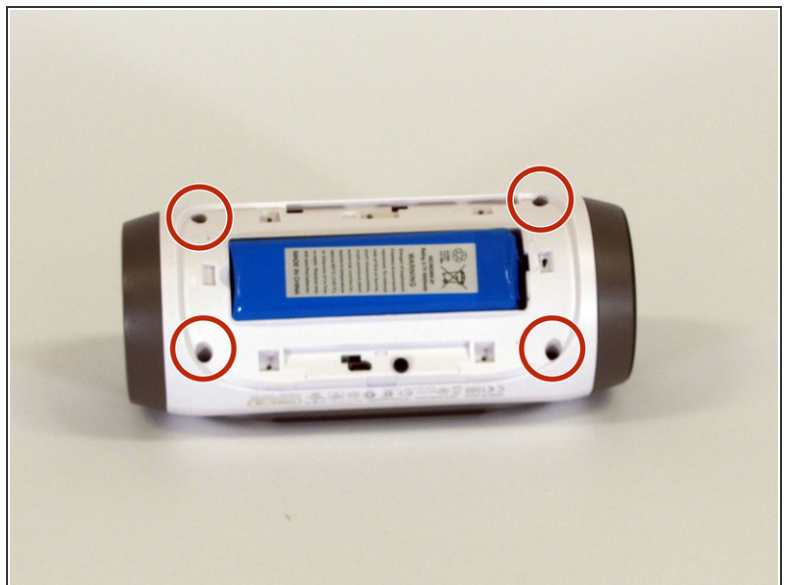



- Remove the remaining four 16mm Phillips screws from the white plastic casing with the PH2 screwdriver.

Step 6

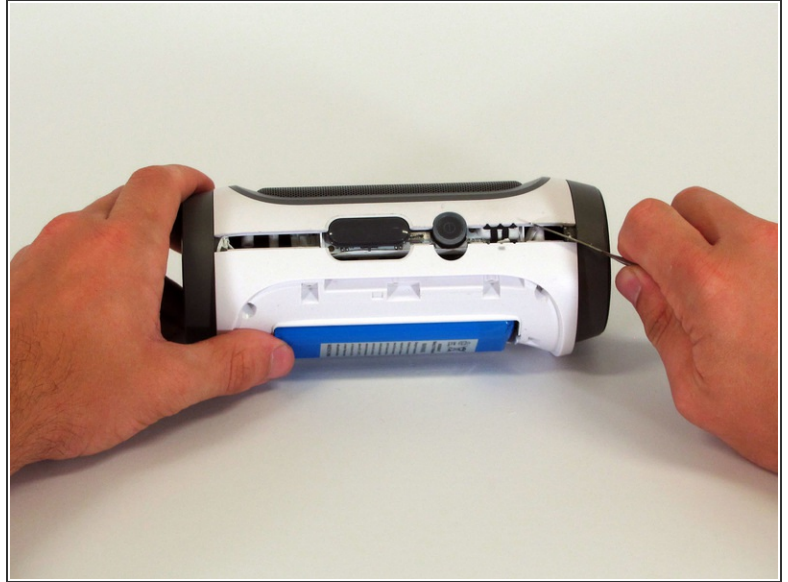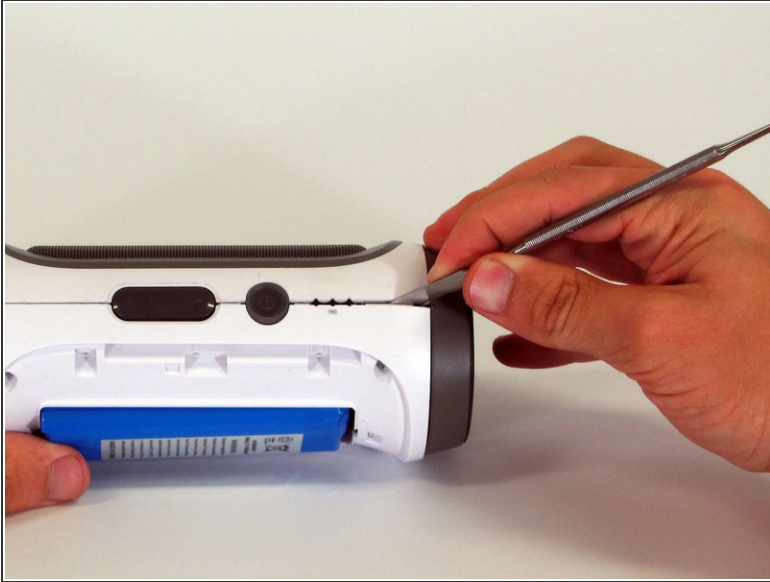


- Start in a corner, where the casing and the side meet. Use a pointed metal spudger to pry apart the glue holding these seams together.
- Slide the metal spudger along these seams to separate the back casing from the rest of the speaker.

Step 7

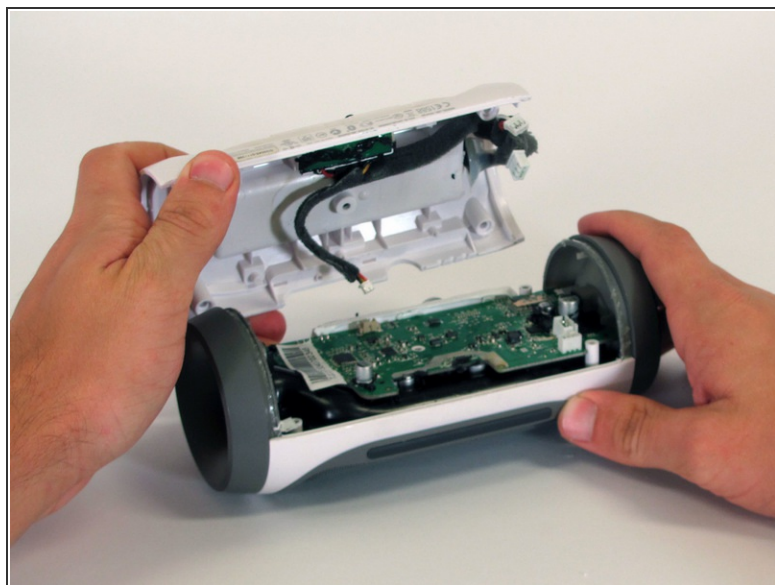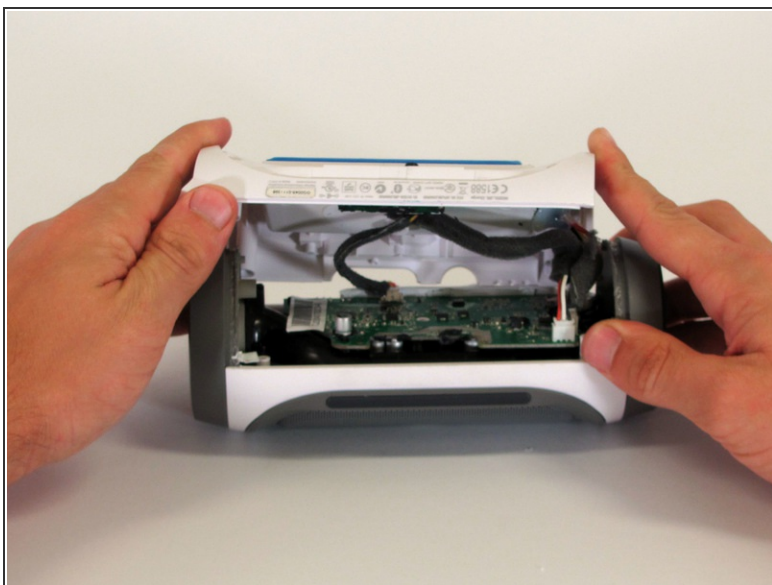


- Once the device is open, disconnect the three white connectors from the motherboard.
- Separate the two pieces of the casing.

Step 8 — Motherboard

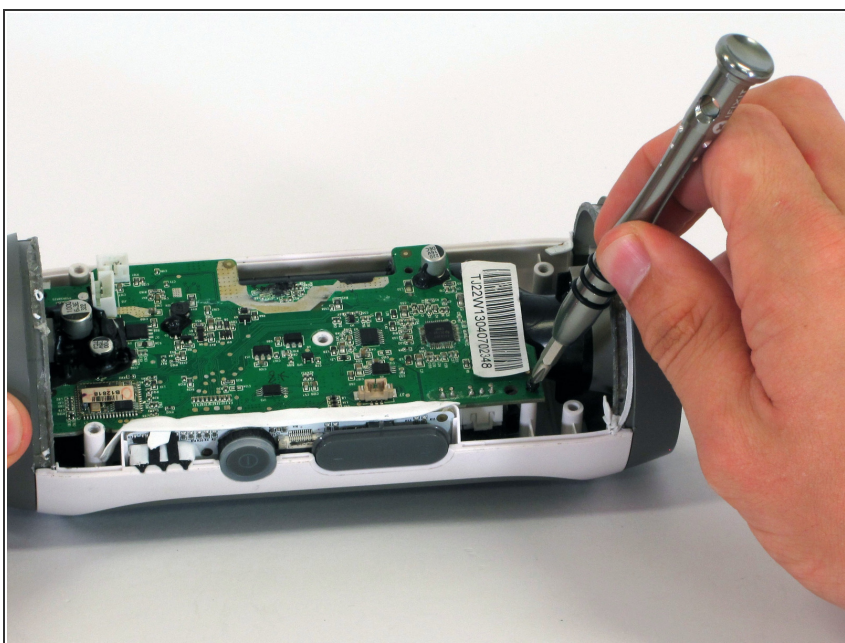


- Remove the 9 mm Phillips screw in the corner of the motherboard.

Step 9

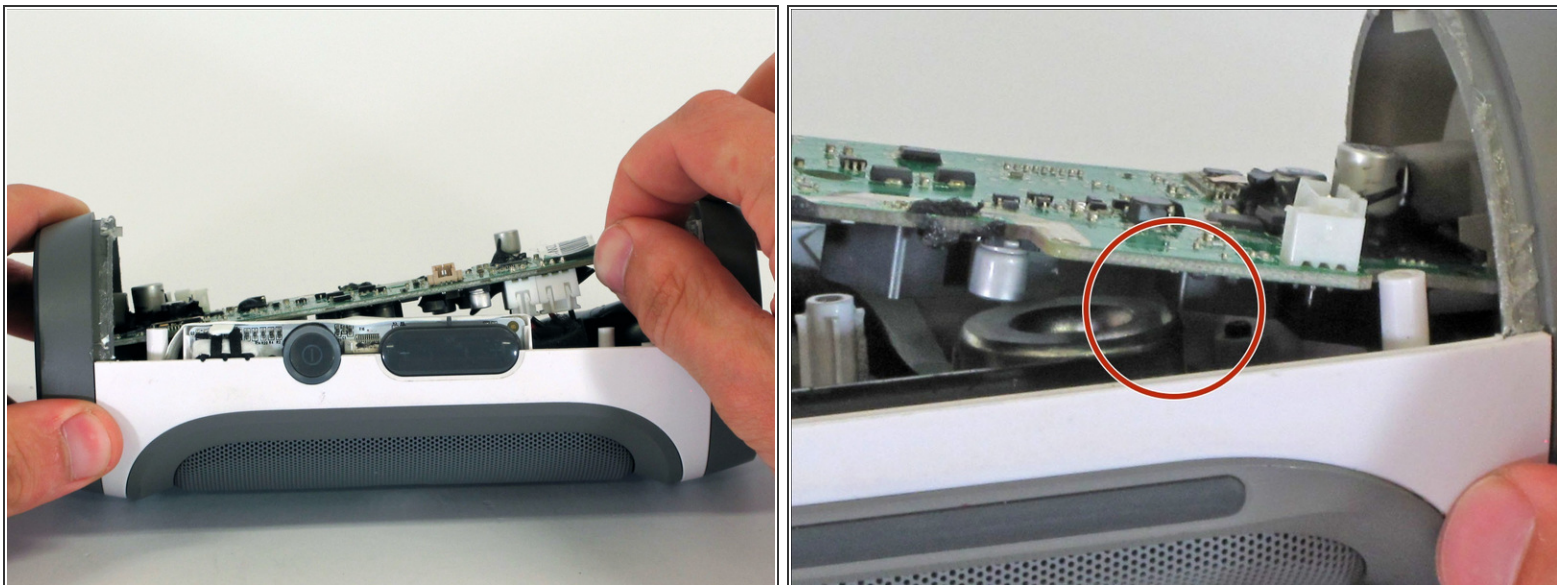



- Remove the motherboard from the casing by lifting the corner of the board out of the device.
 - If the motherboard won't budge, be sure that the square component on the bottom of the motherboard clears the edge of the speaker.
- ⚠ During reassembly, make sure the motherboard is fully installed and not sticking up past its original position, as this could damage the motherboard.

Step 10

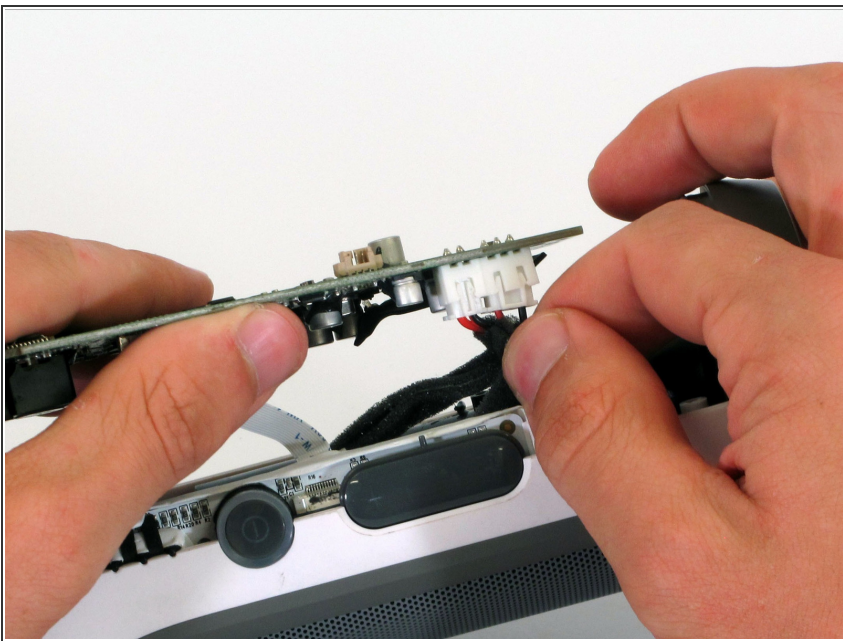


- Disconnect the two white connectors from the bottom of the motherboard.

Step 11

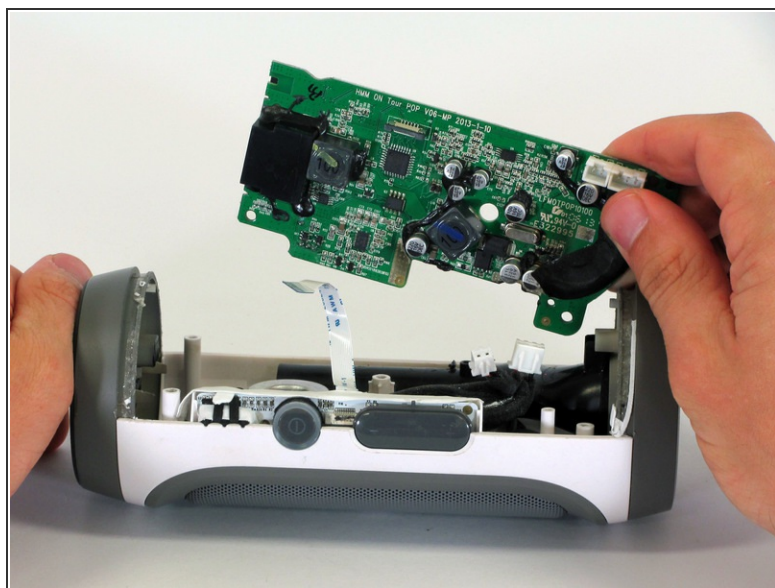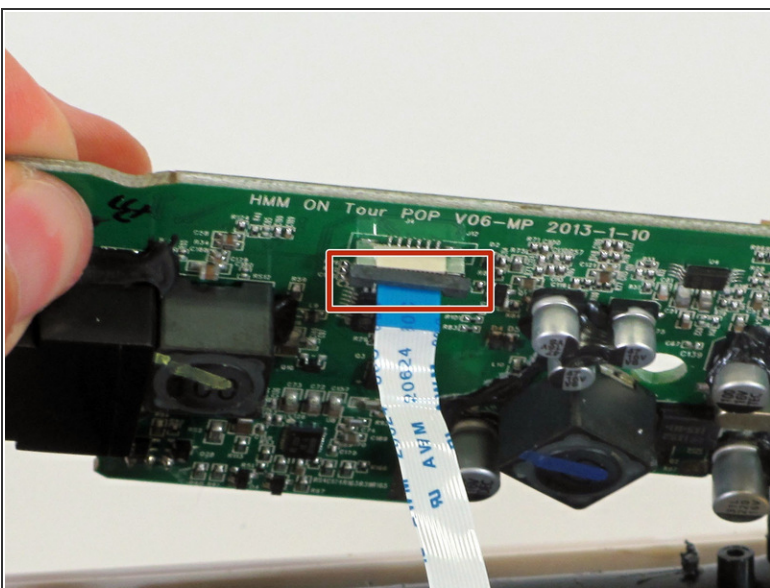



- Pull down on the black clip holding the ribbon cable in place.
- Pull the ribbon cable from the connector using the blue tab.
- Remove the motherboard from the device.

Step 12 — Speaker

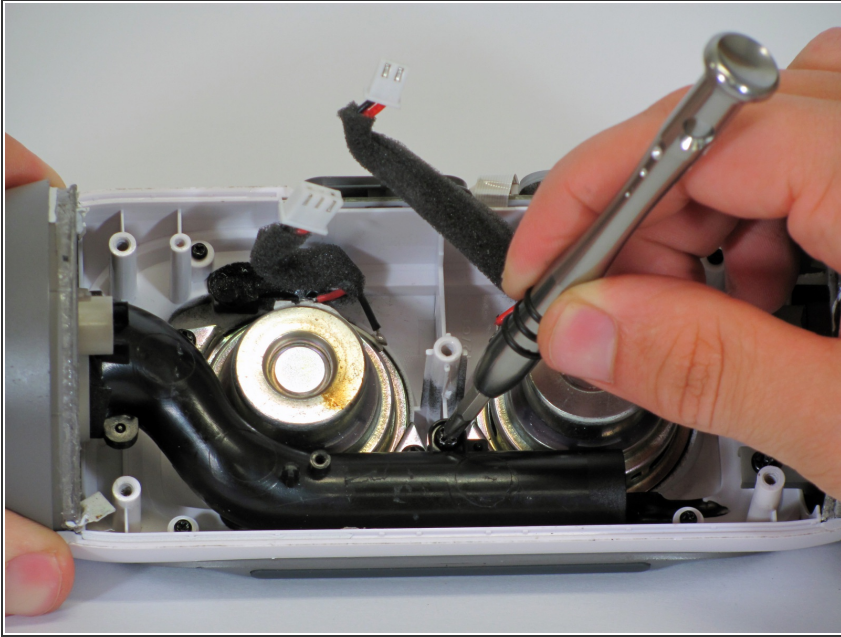



- Using the PH1 screwdriver, remove the 9mm Phillips screw that connects the black tube to the device's interior.

Step 13

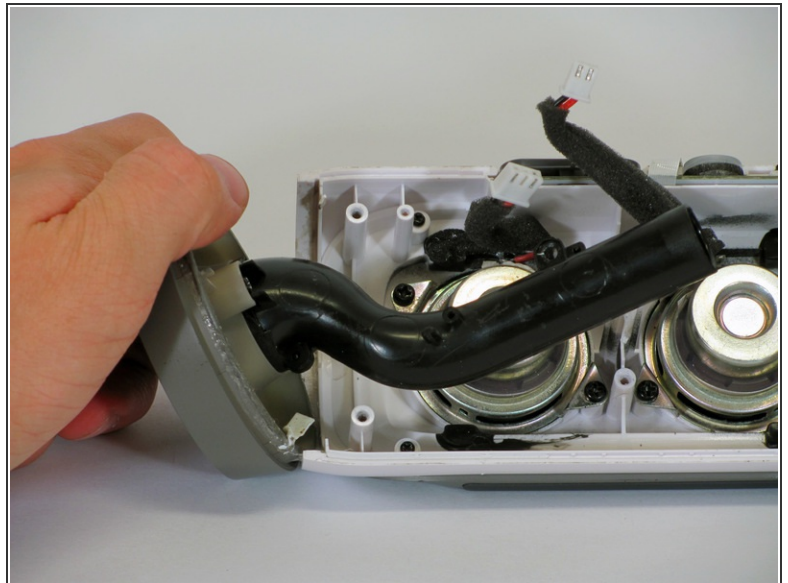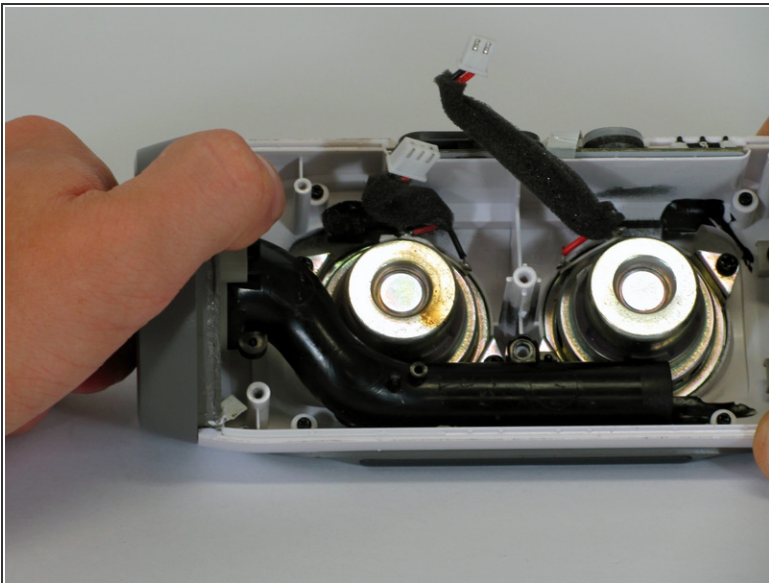


- Slowly but firmly pull the grey cap off the device. This will provide complete access to the speakers.

Step 14

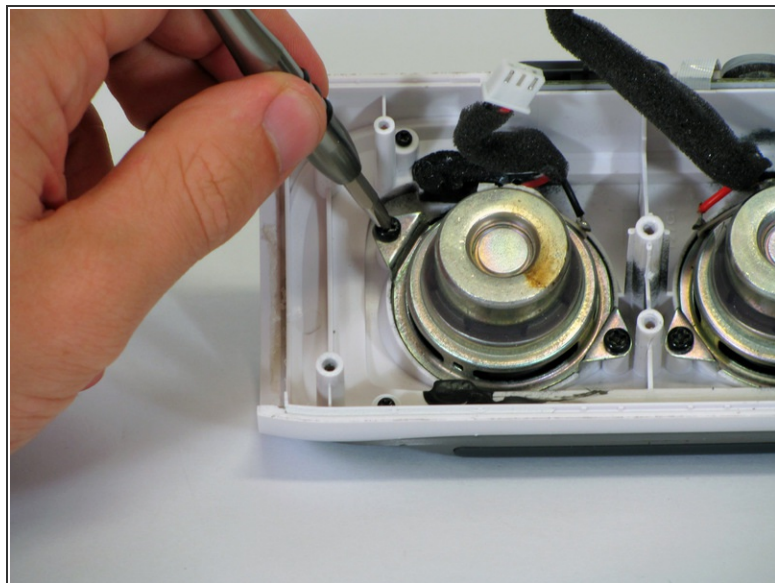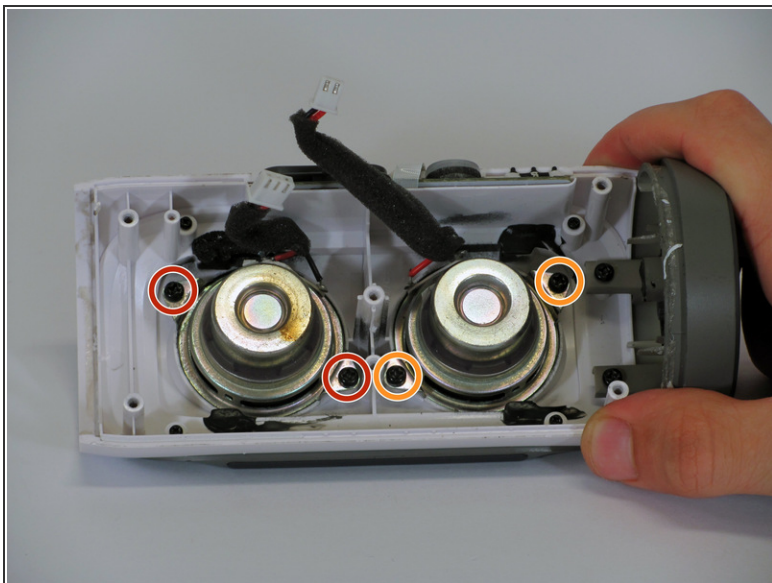

- Each speaker is held in place with two 9mm Phillips screws. Remove the screws using the PH1 screwdriver head.
- If you are replacing the left speaker, remove the screws and speaker on your right.
- If you are replacing the right speaker, remove the screws and speaker on your left.

Step 15

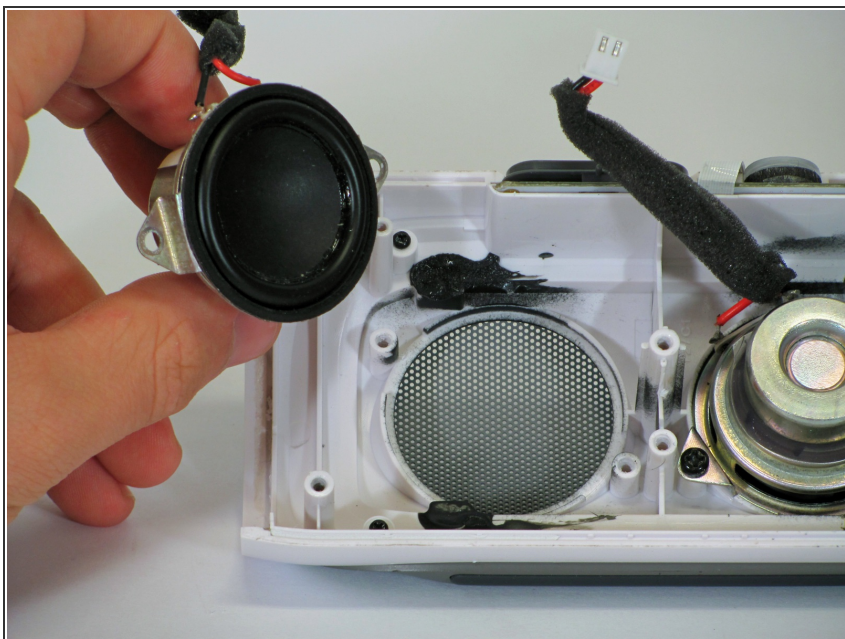

- Pull the speaker out of the casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 08:50:19 PM.